

ORIS
ACPS



bosai



Сертификат соответствия
№ TC RU C-RU.AE56.B.00745

Part number: 3019-FL

Without E-set


Без электрики

Порядок установки
Fitting instruction



**Toyota Fortuner II
SUV**

2015 → ...

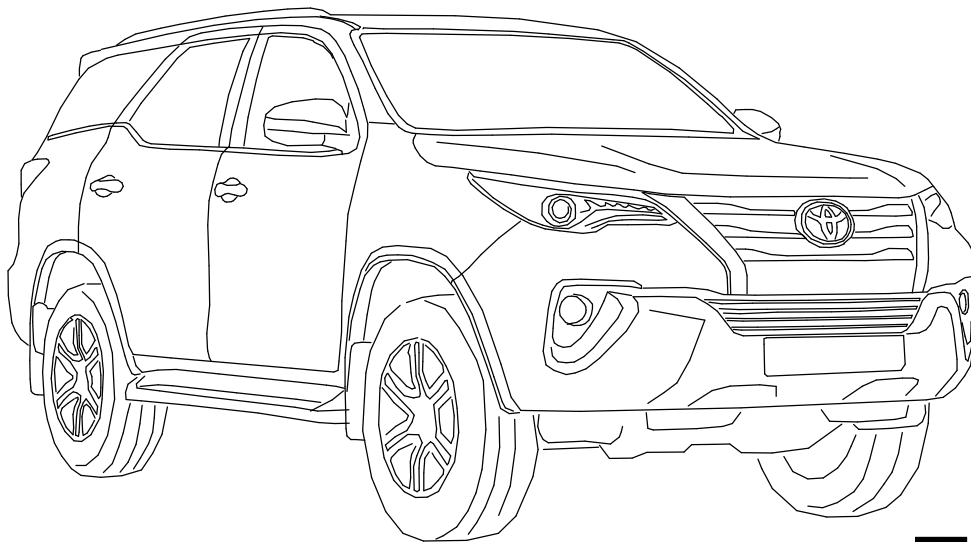



C

1,5h



ООО «Эй-Си-Пи-Эс Автомотив»
462800, Россия, Оренбургская обл.,
п . Новоорск, ул. Шосейная 18
Тел.: (3537) 42-88-24
(495) 799-13-46

www.acps-automotive.ru
www.acps-automotive.com
<http://oris-acps.ru/catalog/>





-
- Technical drawing illustrating the clearance space requirements for a vehicle's side profile. The drawing shows the vehicle's outline with various dimensions and angles specified for clearance.
- Key dimensions and angles shown:
- Clearance space: Indicated by a shaded area.
 - Vertical plane at limits of vehicle overall dimensions: A horizontal line defining the vehicle's height.
 - Angles: 1° max. , 30° max. , 0° max. , 30° max. .
 - Distances: 100 max. , 75 min. , 75 min. .
 - Curvature: $R14.5 \text{ max.}$, $R40 \text{ max.}$.

GB The manufacturer guarantees that this product of the materials used, of the technology and other parameters applied, corresponds to the samples, tested on strength and meets the technical requirements of Regulation № 55 and TU29.32.30-002-94514952-2017. To avoid possible errors, before installation please read carefully the instructions for installation and the possible use of the tow bar for your vehicle. LLC "ACPS Automotive" ensures that the tow bar is installed on the motor vehicle of the model year specified in the installation manual. The manufacturer doesn't guarantee the installation of the tow bar on a restyled (upgraded) version of the vehicle. Claims for such cases are not accepted. When using the Tow bar, always refer to the instruction manual of the manufacturer of the vehicle to determine the maximum permissible weight of the trailer and maximum vertical load on the ball. Make a request to the vehicle manufacturer agents / dealers about the maximum towing weight that is valid for your vehicle and you must not exceed the specified values, taking into account the data for the Tow bar.

Operating and maintenance

1. Maintenance of the tow bar is inspection and tightening of the bolt junctions, the device retaining, fastening electrical contacts and verifying the condition of the painted surface of the Tow bar. In order to prevent corrosion, the Tow bar should be kept clean of corrosive materials (salt of the road, dirt and moisture). If you find scratches, split you should cover the damaged area with a restoring paint, or contact customer service.
2. If the vehicle is operated without a trailer, you need to cover the coupling ball with a protective lubricant and put up a protective cap. When coupling the trailer to the vehicle the ball must be lubricated with grease.
3. After fixing the trailer's coupling head to the ball of the Tow bar, you should implement a protective safety connection of the trailer with a vehicle, using a hinge of the Tow bar to retain the safety chains.
4. After the first 1000 km of the vehicle's mileage with a trailer you should inspect the tightening of the all bolt junctions of the tow bar.
5. Don't exceed the maximum towing weight and maximum vertical load specified in the instruction manual of the Tow bar. Overloading can result in damage to the vehicle and / or to the Tow bar. In extreme cases such overloading can lead to uncoupling of the towed trailer and cause serious accidents.
6. Don't use the Tow bar with cracks in the welding seams, with serious damage, dents and ruptures of metal on the Tow bar's details.
7. Don't tow a trailer of the full weight exceeding the weight specified by the manufacturer of the vehicle or of the tow bar (which is less), and with a speed exceeding the limit for this road section.
8. In case of the car moves with a trailer in off-road conditions, the maximum allowable loading of tow bar is reduced by 50% of the loading, announced by manufacturer, the speed of movement should not exceed 30 km/h.

WARRANTY

1. LLC "ACPS Automotive" ensures a reliable usage of the Tow bar within 24 months from the date of its installation at the special workshop, in case of exploiting the tow bar in full compliance with this manual, except the cases when a tow bar is misused (including Overloading).
2. Any claims are accepted only if the completed warrant certificate of installation sealed and signed by the installer, two labels from the packaging, with indicating the check weight of the Tow bar and the packaging are available.
3. We reserve the right to change the design of the Tow bar, therefore some changes which do not degrade the strength and the quality, may not be reflected in this manual.
4. The company is not responsible for the safety and reliability of the Tow bar which design is changed by the consumer, as well as the Tow bar which bolts and nuts are replaced with strength class below 8.8.

RU Производитель гарантирует, что данное изделие по используемым материалам, применяемой технологии производства и другим показателям соответствует образцам, прошедшим испытания на прочность и отвечает техническим требованиям Правил ЕЭК ООН №55 и ТУ 29.32.30-002-94514952-2017. Во избежании возможных ошибок, перед установкой внимательно ознакомьтесь с инструкцией по монтажу и возможностью применения данного ТСУ к Вашему автомобилю. ООО «Эй-Си-Пи-Эс Автомотив» гарантирует, что тягово-сцепное устройство устанавливается на автомобили модельного года, указанного в инструкции по монтажу. Производитель не гарантирует установку ТСУ на рестайлинговые (модернизированные) версии автомобилей, претензии по подобным случаям не принимаются.

При использовании фаркопа всегда обращайтесь к инструкции изготовителя транспортного средства, для определения максимально допустимого веса прицепа и максимальной вертикальной нагрузки на шар. Спросите у изготовителя транспортного средства / дилера о максимальной допустимой массе буксировки, которые допустимы для вашего автомобиля и не превышайте указанных значений, с учетом данных для фаркопа.

Правила эксплуатации и технического обслуживания

1. Техническое обслуживание ТСУ заключается в периодическом осмотре и затяжке болтовых соединений ТСУ, крепления приборов и контактов электрооборудования и состояния окрашенной поверхности ТСУ. В целях предотвращения появления коррозии ТСУ необходимо содержать в чистоте от коррозионно-активных материалов (дорожная соль, грязь и влага). При обнаружении царапин, сколов поврежденное место необходимо обработать восстанавливающей краской, либо обратиться в сервисную службу.
2. Если автомобиль эксплуатируется без прицепа, необходимо сцепной шар покрыть защитной смазкой и надеть защитный колпак. При сцепке прицепа с автомобилем шар должен быть смазан консистентной смазкой.
3. После фиксации сцепной головки прицепа на шаре ТСУ, осуществлять страховочную связь прицепа с автомобилем, используя петлю на ТСУ для крепления страховочных цепей.
4. После пробега каждые 1000 км с прицепом проверить момент затяжки всех резьбовых соединений ТСУ.
5. Недопускается превышение максимального буксируемого веса и максимальной вертикальной нагрузки указанной в инструкции ТСУ.
6. Перегрузка может привести к повреждению автомобиля и/или ТСУ. Такая перегрузка в крайнем случае может привести к отцеплению буксируемого автоприцепа, что может стать причиной серьезного ДТП.
7. Недопускается эксплуатация ТСУ при наличии трещин в сварочных швах, серьезных повреждений, вмятин и разрывов металла на деталях ТСУ.
8. Не допускается буксировка прицепа полной массой более указанной производителем автомобиля или фаркопа (что меньше), и со скоростью превышающей ограничение для данного участка дороги.
9. В случае движения автомобиля с прицепом или автопоезда в условиях бездорожья, максимально допустимая грузоподъемность ТСУ сокращается на 50% от заявленных производителем, при этом скорость движения не должна превышать 30 км/ч.

ГАРАНТИЙНЫЕ ОБЯЗАТЕЛЬСТВА

1. ООО «Эй-Си-Пи-Эс Автомотив» гарантирует безотказную работу ТСУ в течении 24 месяцев со дня установки в специализированной мастерской, при условии его эксплуатации в полном соответствии с настоящим руководством, кроме случаев когда ТСУ использовались не по назначению (в том числе перегруз).
2. Любые претензии принимаются во внимание только при наличии заполненного свидетельства об установке с печатью автомастерской и подписью установщика и двух этикеток с упаковки, с указанием контрольной массы ТСУ и коробки.
3. Изготовитель оставляет за собой право на изменение конструкции ТСУ, поэтому некоторые изменения, не ухудшающие его прочностные и потребительские качества, могут быть не отражены в настоящем руководстве.
4. Предприятие не несет ответственность за безопасность и надежность работы ТСУ при внесении потребителем изменений в его конструкцию, а также при замене болтов и гаек с классом прочности ниже 8.8

СВИДЕТЕЛЬСТВО ОБ УСТАНОВКЕ

ТСУ установлено на автомобиль: Модель VIN

Мы, как установщики ТСУ на данное транспортное средство подтверждаем, что точки крепления установки ТСУ на кузове автомобиля, а также процесс установки отвечают требованиям схемы монтажа, указанной в данной инструкции по монтажу.

М.П.

Дата установки

Подпись



G: Attention
D: Achtung
H: Figyelem
F: Attention
I: Attenzione
NL: Let op
E: Atención
FIN: Huomio
S: Varning
N: Pass på
CZ: Pozor
PL: Uwaga
RU: Внимание
DK: Bemærk




GB: Incorrect
D: Falsch
H: Helytelen
F: Incorrect
I: Sbagliato
NL: Fout
E: Incorrecto
FIN: Väärä
S: Fel
N: Feil
CZ: Špatně
PL: Nieprawidłowo
RU: Неправильно
D: Forkert



G: Correct
D: Richtig
H: Helyes
F: Correct
I: Giusto
NL: Goed
E: Correcto
FIN: Oikea
S: Rätt
N: Riktig
CZ: Správně
PL: Prawidłowo
RU: Правильно
DK: Rigtig




GB: Inspect
D: Überprüfen
H: Vizsgál'a meg
F: Examiner
I: Esaminare
NL: Controleren
E: Revise
FIN: Tutki
S: Kontrollera
N: Undersøk
CZ: Prohlédnout
PL: Należy sprawdzić
RU: Проверьте
D: Undersøg



GB: In both sides
D: Auf beiden Seiten
H: Mindkét oldalón
F: Tous les deux côtés
I: Su entrambi i lati
NL: Aan beide kanten
E: En ambos lados
FIN: Molempi sivu
S: På båda sidorna
N: På begge sider
CZ: Na obou stranách
PL: Z obu stron
RU: На обеих сторонах
DK: På begge sider



G: Manually
D: Mit manueller Kraft
H: Kézi erővel
F: À la main
I: Con forza manuale
NL: Met de hand
E: A mano
FIN: Kädenvoimalla
S: Manuellt
N: Bruk bare håndkraft
CZ: Ručně
PL: Ręcznie
RU: Вручную
DK: Med manuel kraft



GB: Only 2 persons may carry it
D: Nur zu zweit ausführen
H: Csak két személy végezheti el
F: Tous'ours s'y mettre de deux
I: Da eseguire soltanto in due
NL: Alleen met 2 personen uitvoer-n
E: Operación que requiere dos personas
FIN: Kahden hengen tehtävä
S: Utförs endast av två personer
N: Må utføres av to personer
CZ: Provádět jen ve dvou
PL: Wykonywać tylko w dwie osoby
RU: Выполнять только вдвоем
DK: Skal udføres af to personer



GB: Remove
D: Entsorgen
H: Távolítsa el
F: Rebuter
I: Smaltire i rifiuti
NL: Weggooien
E: Tratamiento de residuos
FIN: Poista
S: Ta hand om avfallet
N: Ta hånd om avfallet
CZ: Vyhodit
PL: Usunąć jako odpad
RU: Удалить
DK: A fald



GB: Location/Position
 Arrow
D: Positionspfeil
H: Helyzet'elző nyíl
F: Flèche de Position
I: Freccia di posizione
NL: Lokatie-/positiepi'l
E: Flecha de posición
FIN: Asentonuoli
S: Positionpil
N: Posis'ionspil
CZ: Šipka na pozici
PL: Strzałka położenia
RU: Стрелка положения
DK: Lokaliseringspil


GB: Movement Arrow
D: Bewegungspfeil
H: Mozgásirányjelző nyíl
F: Flèche de mouvement
I: Freccia di movimento
NL: Richtingspi'l
E: Flecha de movimiento
FIN: Liikesuuntanuoli
S: Rörelsepil
N: Bevegelsespil
CZ: Šipka pohybu
PL: Strzałka kierunku ruchu
RU: Стрелка хода
DK: Bevægelsespil




G: Electrical connection
D: Elektroanschuss
H: Elektromos csatlakozás
F: Connexion électrique
I: Collegamento elettrico
NL: Elektrische aansluiting
E: Conexión eléctrica
FIN: Sähköliitännä
S: Elektrisk anslutning
N: Elektrisk kontakt
CZ: Elektrické připo'eni
PL: Podłączenie do prądu
RU: Электрическое соединение
DK: Elektrisk forbindelse




GB: Protect it against corrosion
D: Gegen Korrosion schützen
H: Véd'e korrózió ellen
F: Protéger contre la corrosion
I: Proteggere dalla corrosione
NL: Beschermen tegen corrosie
E: Proteg-r contra la corrosión
FIN: Suo'a ruostumisesta
S: Skydda mot korrosion
N: Beskytt mot korros'on
CZ: Chránit proti korozi
PL: Chronić przed korozją
RU: Защищать от коррозии
D: Elektrisk forbindelse



GB: Tools Required
D: Benötigte Werkzeuge
H: Szükséges szerszámok
F: Outils requis
I: Strumenti necessari
NL: Benodigd gereedschap
E: Herramientas requeridas
FIN: Tarvittavat työkalut
S: Nödvändiga verktyg
N: Nødvendige værktøj
CZ: Potřebné nástroje
PL: Potrzebne narzędzia
RU: Необходимые инструменты
DK: Nødvendige værktø'er

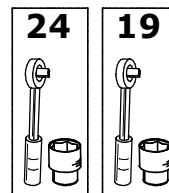

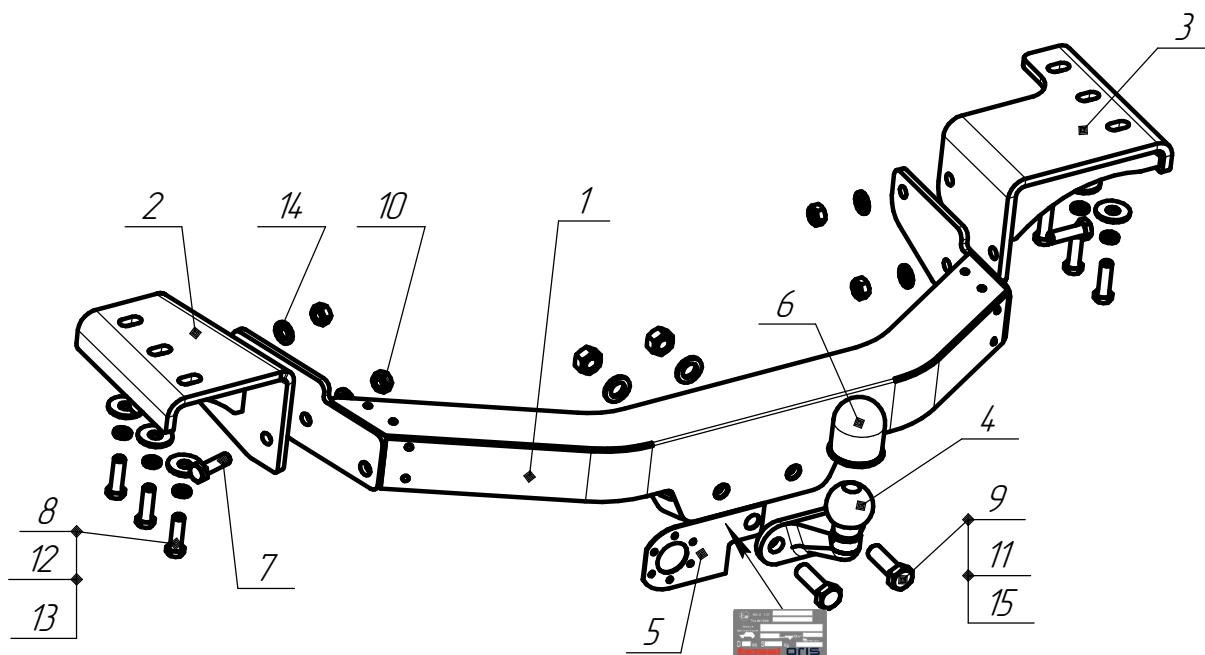








1		3019.01.00.00.00СБ Балка с пластиной	1х
2		3015.03.00.00.00СБ Кронштейн левый	1х
3		3015.02.00.00.00СБ Кронштейн правый	1х












4		Шар F хром	1х
5		БАФ-002 Кронштейн розетки хром	1х
6		Колпачок на шар хром	1х

7		Болт М12х40	8.8	79Нм	4х
8		Болт М12х1,25х40	8.8	79Нм	6х
9		Болт М16х50	8.8	195Нм	2х
10		Гайка М12 с/контр	8.8	79Нм	4х
11		Гайка М16 с/контр	8.8	195Нм	2х
12		Шайба12 пружин			6х
13		Шайба12 увелич.			6х
14		Шайба12			4х
15		Шайба16			2х

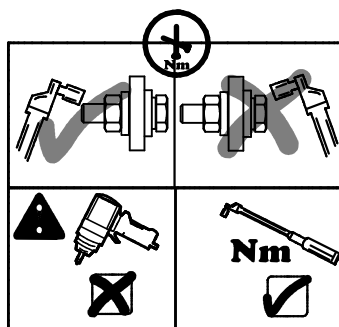

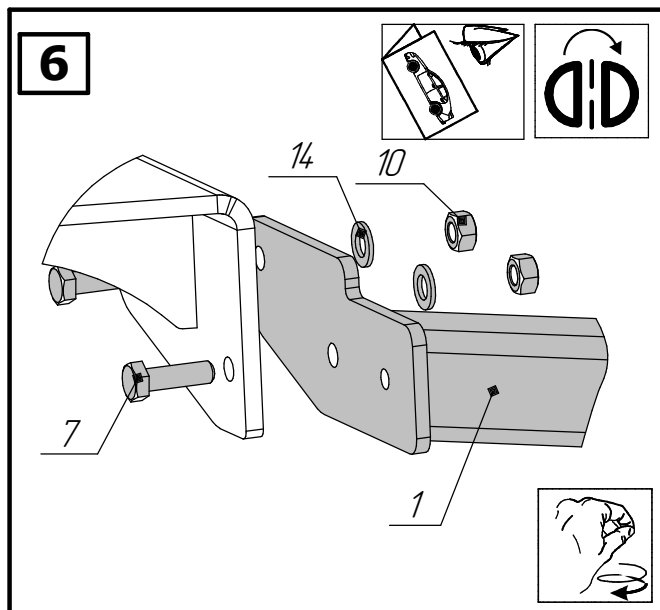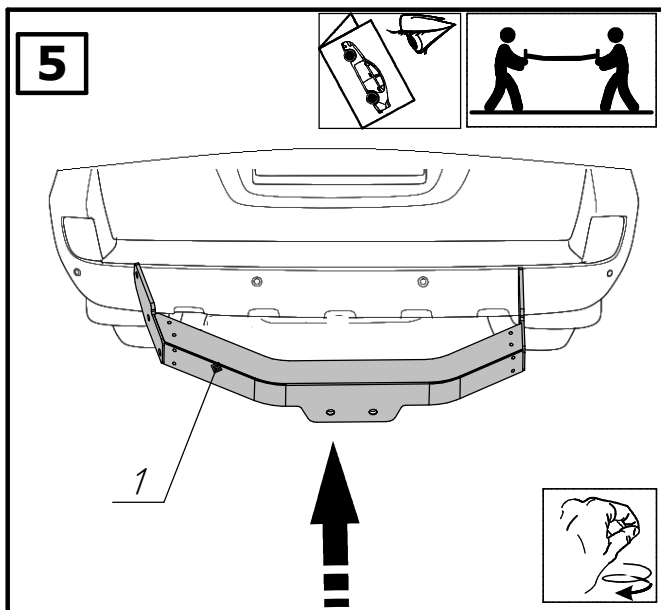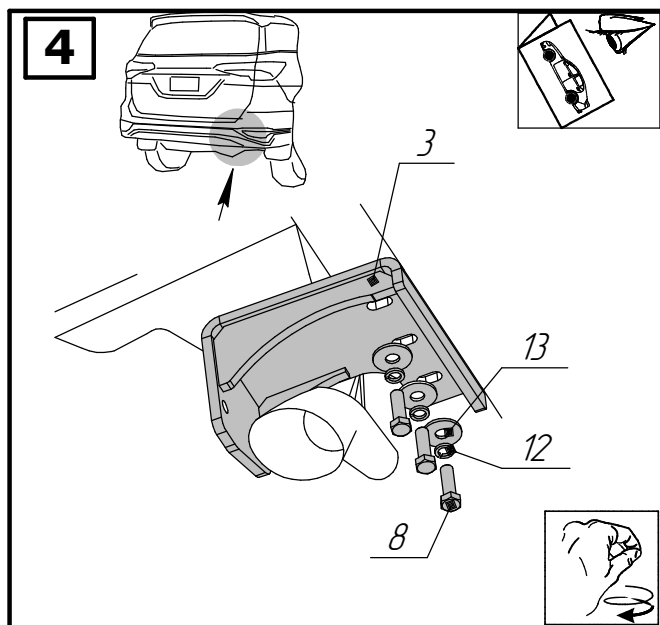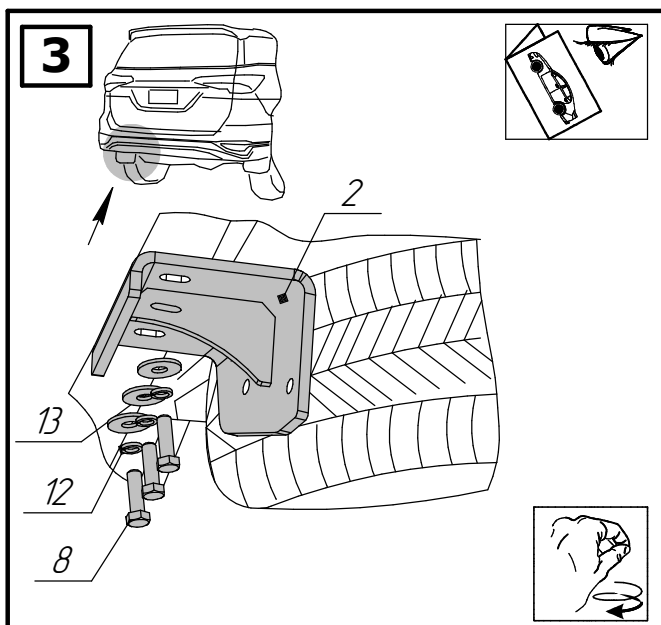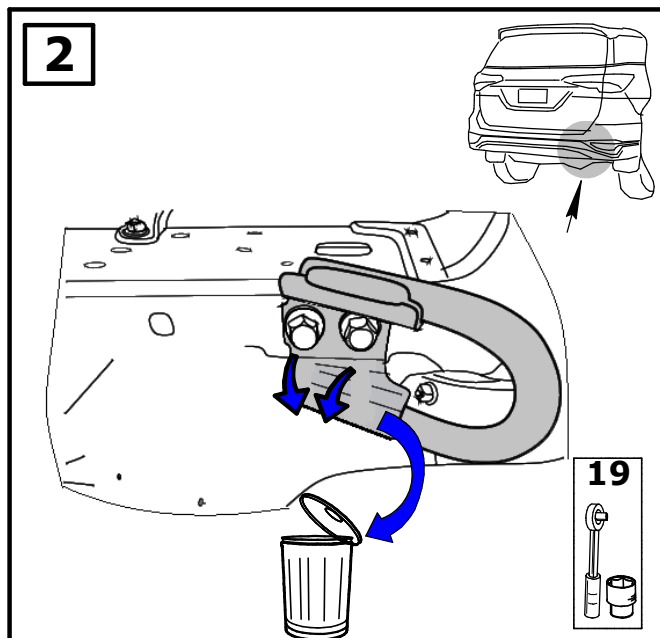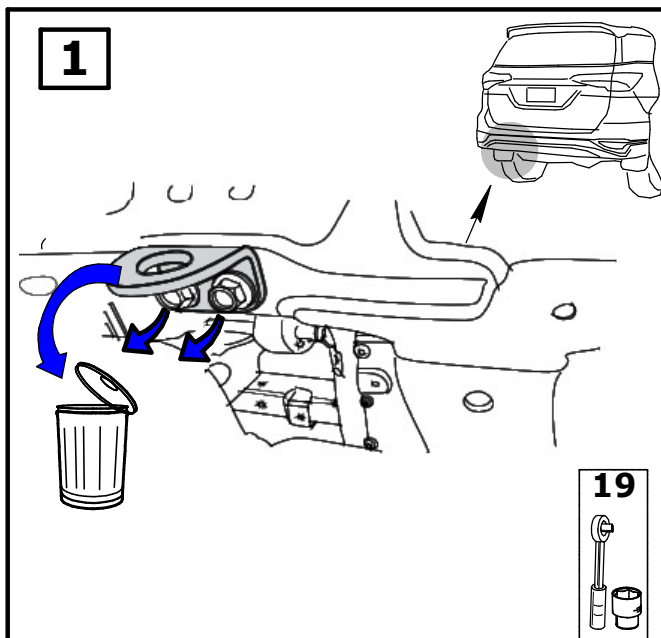

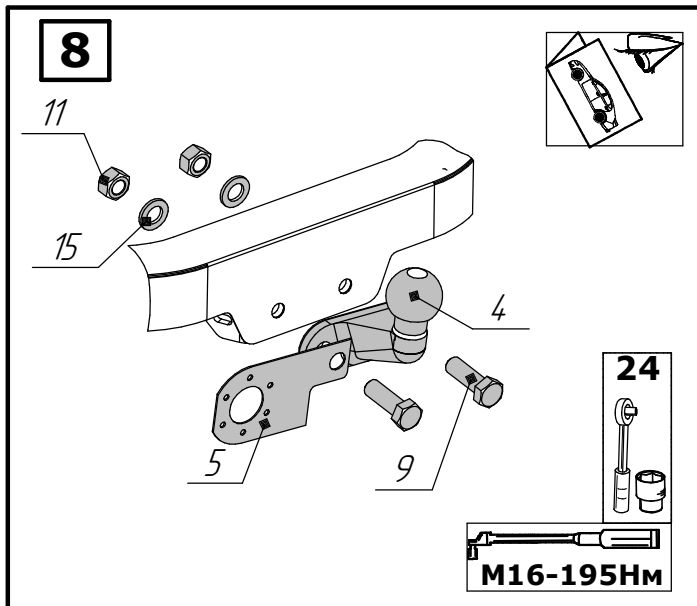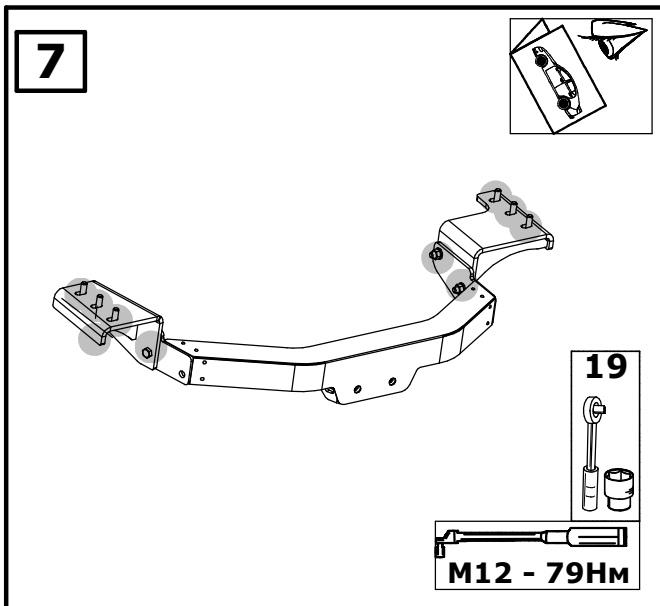

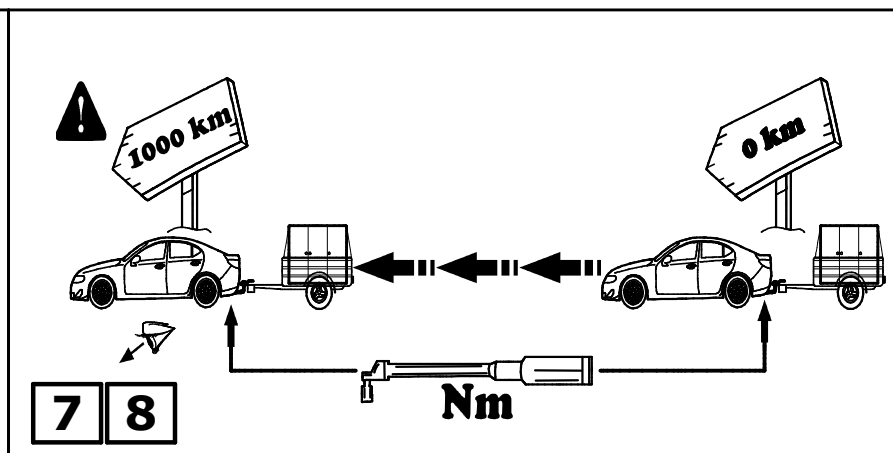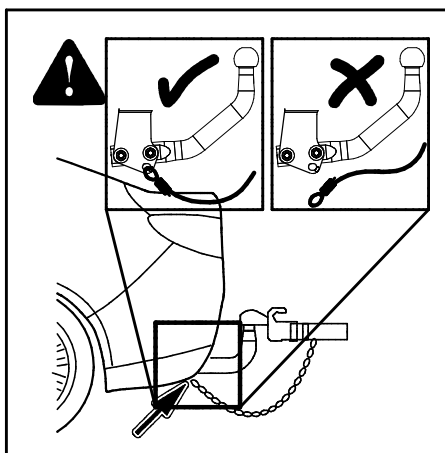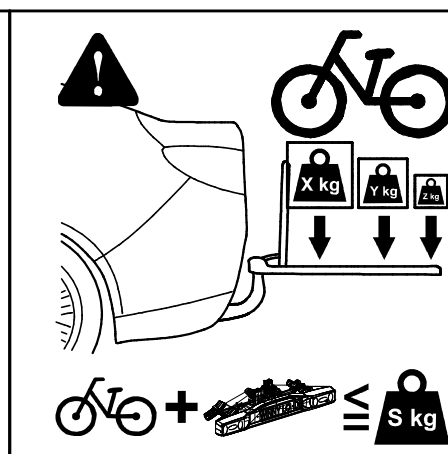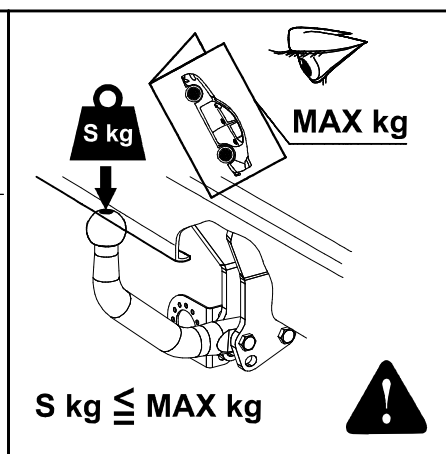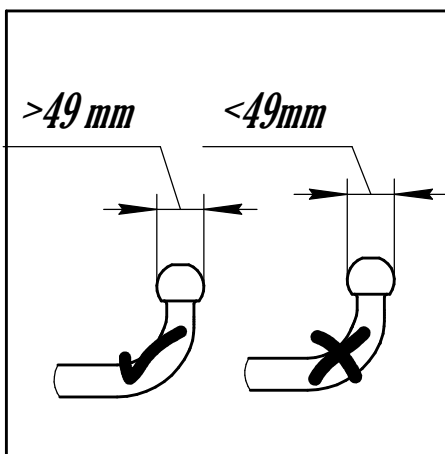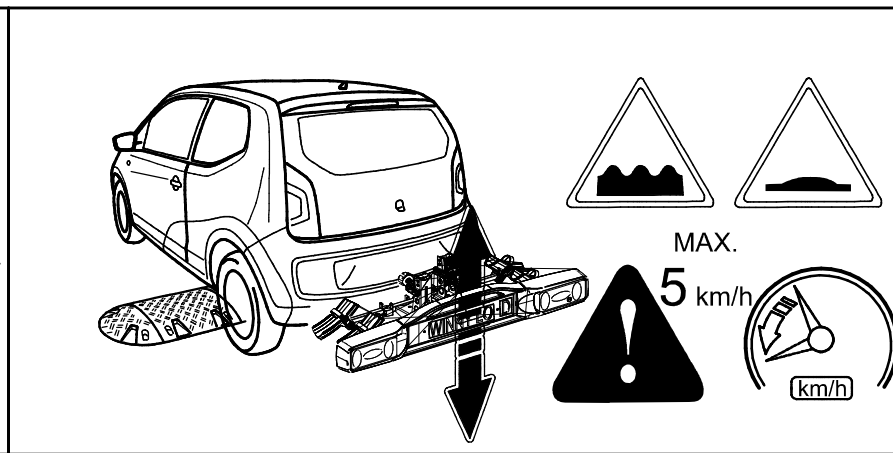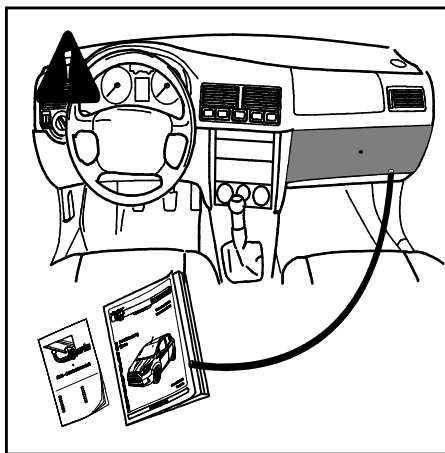

RU +7 35363 7 0506

RU farkop@acps-automotive.com